

Wizard CompSpec C2 Assembly Instructions




Parts Needed

Truck assembly from previous steps

Bag D

- (1) part# ott-tko10-020 Front Upper Link x1
- (2) part# ott-tko10-082 M3 x 0.5 x 14mm button head screw x1
- (3) part# ott-tko10-093 M3 nylock nut x1

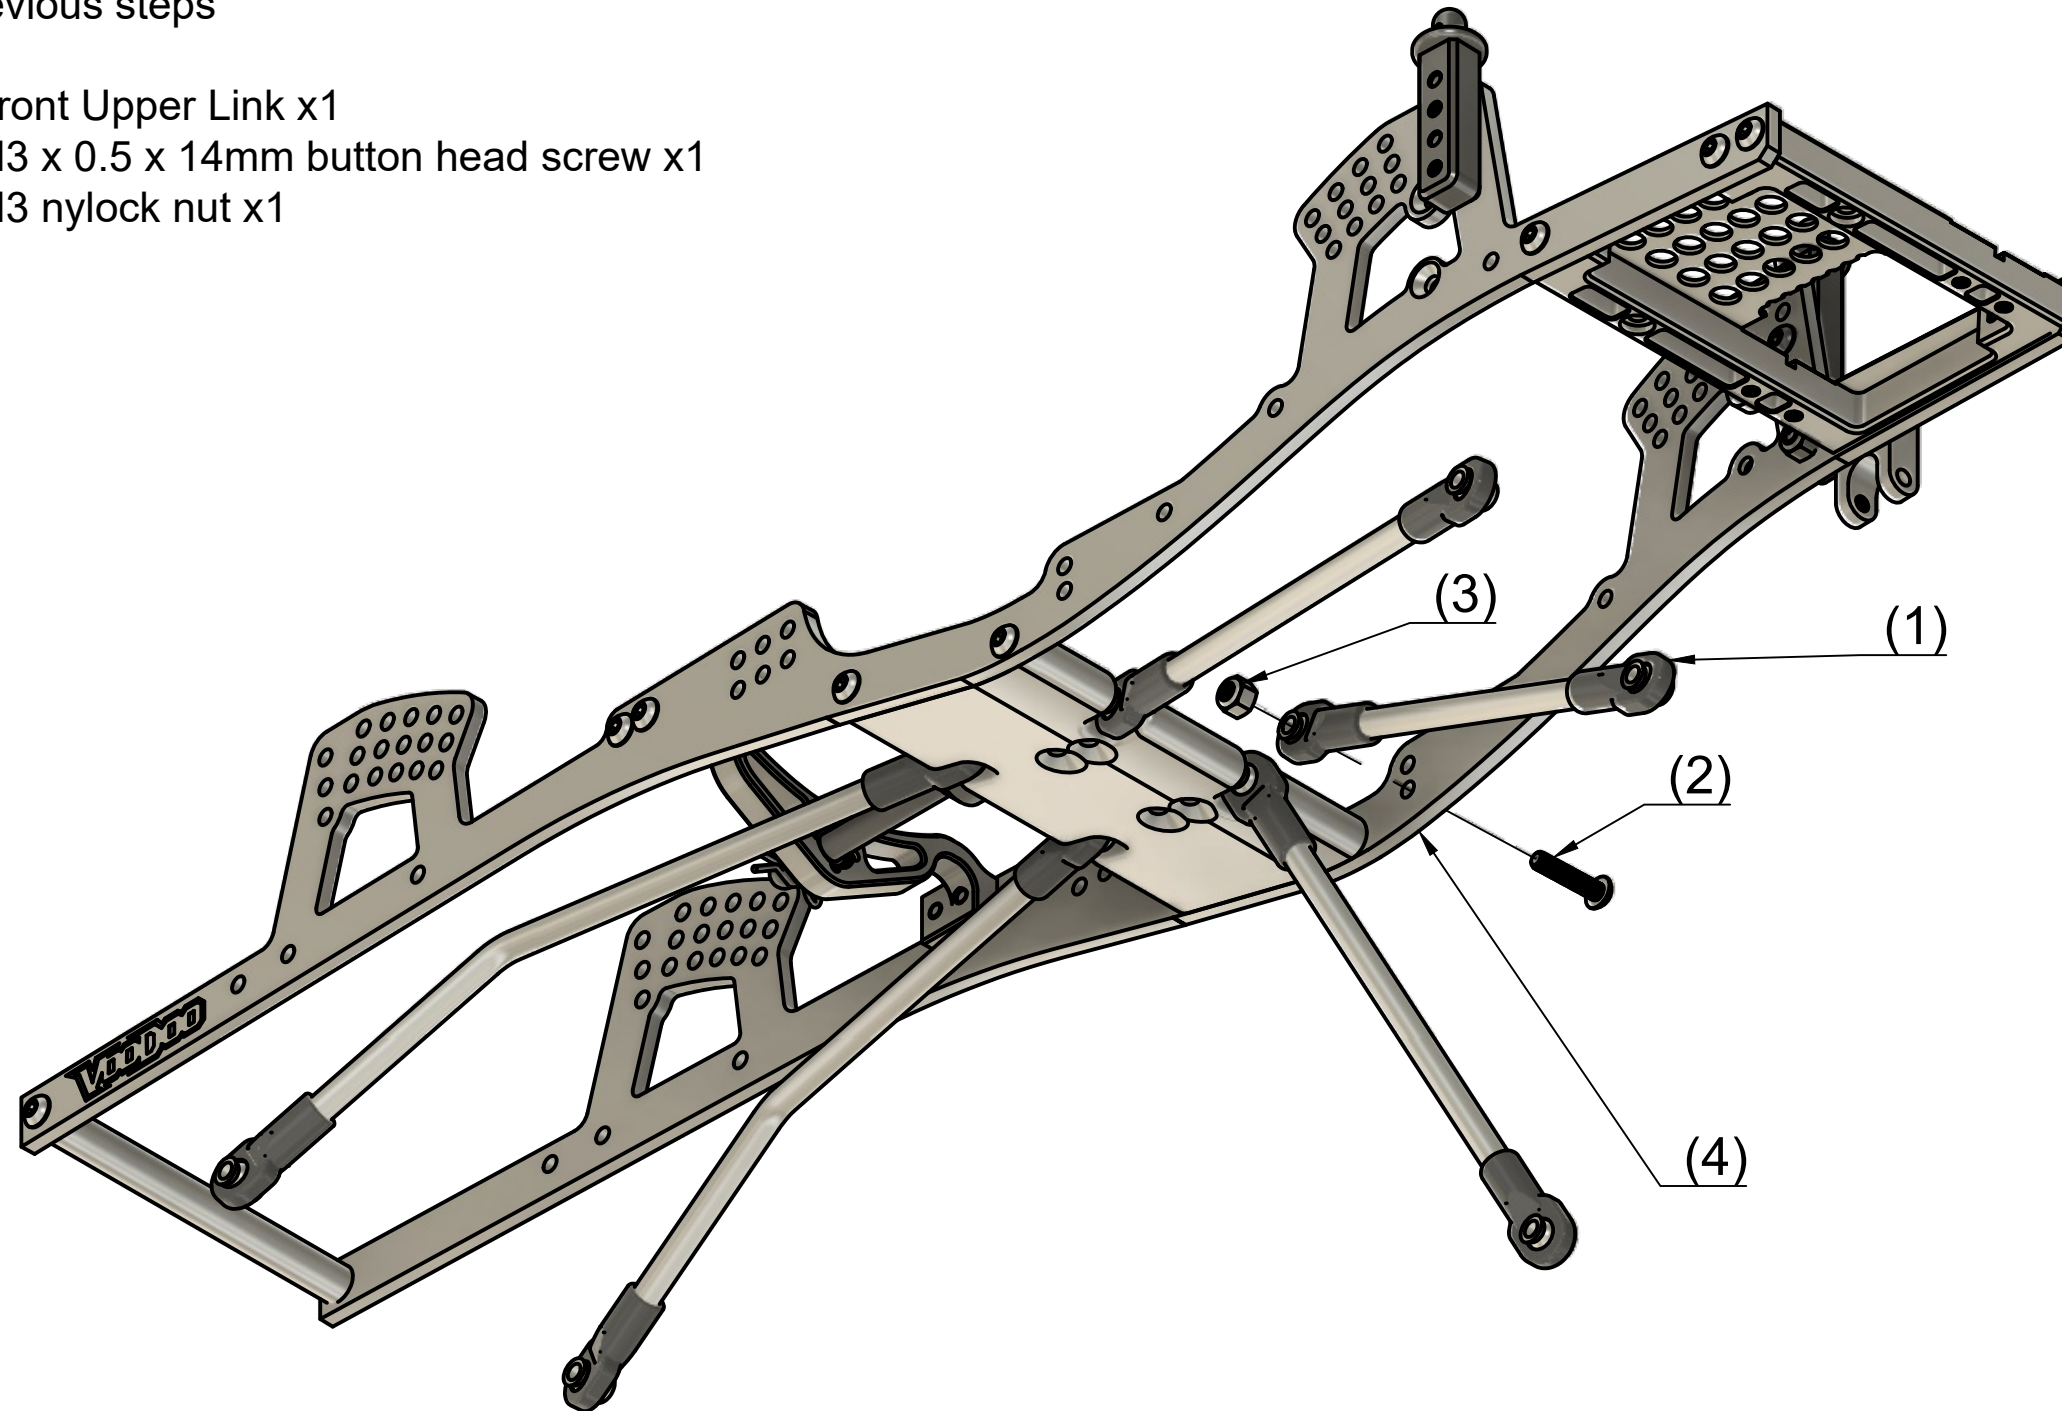

Step 10

Insert M3 x 0.5 x 14mm screw (2) through chassis left side rail (4)

Insert Front Upper Link (1) onto M3 x 0.5 x 14mm screw (2)

Install M3 nylock nut (3) onto M3 x 0.5 x 14mm screw (2)

