

Wizard CompSpec C2 Assembly Instructions




Parts Needed

Truck assembly from previous steps

Bag K

(1) part# ott-tko10-097 Hero Nano 74-84mm Rear Driveshaft x1

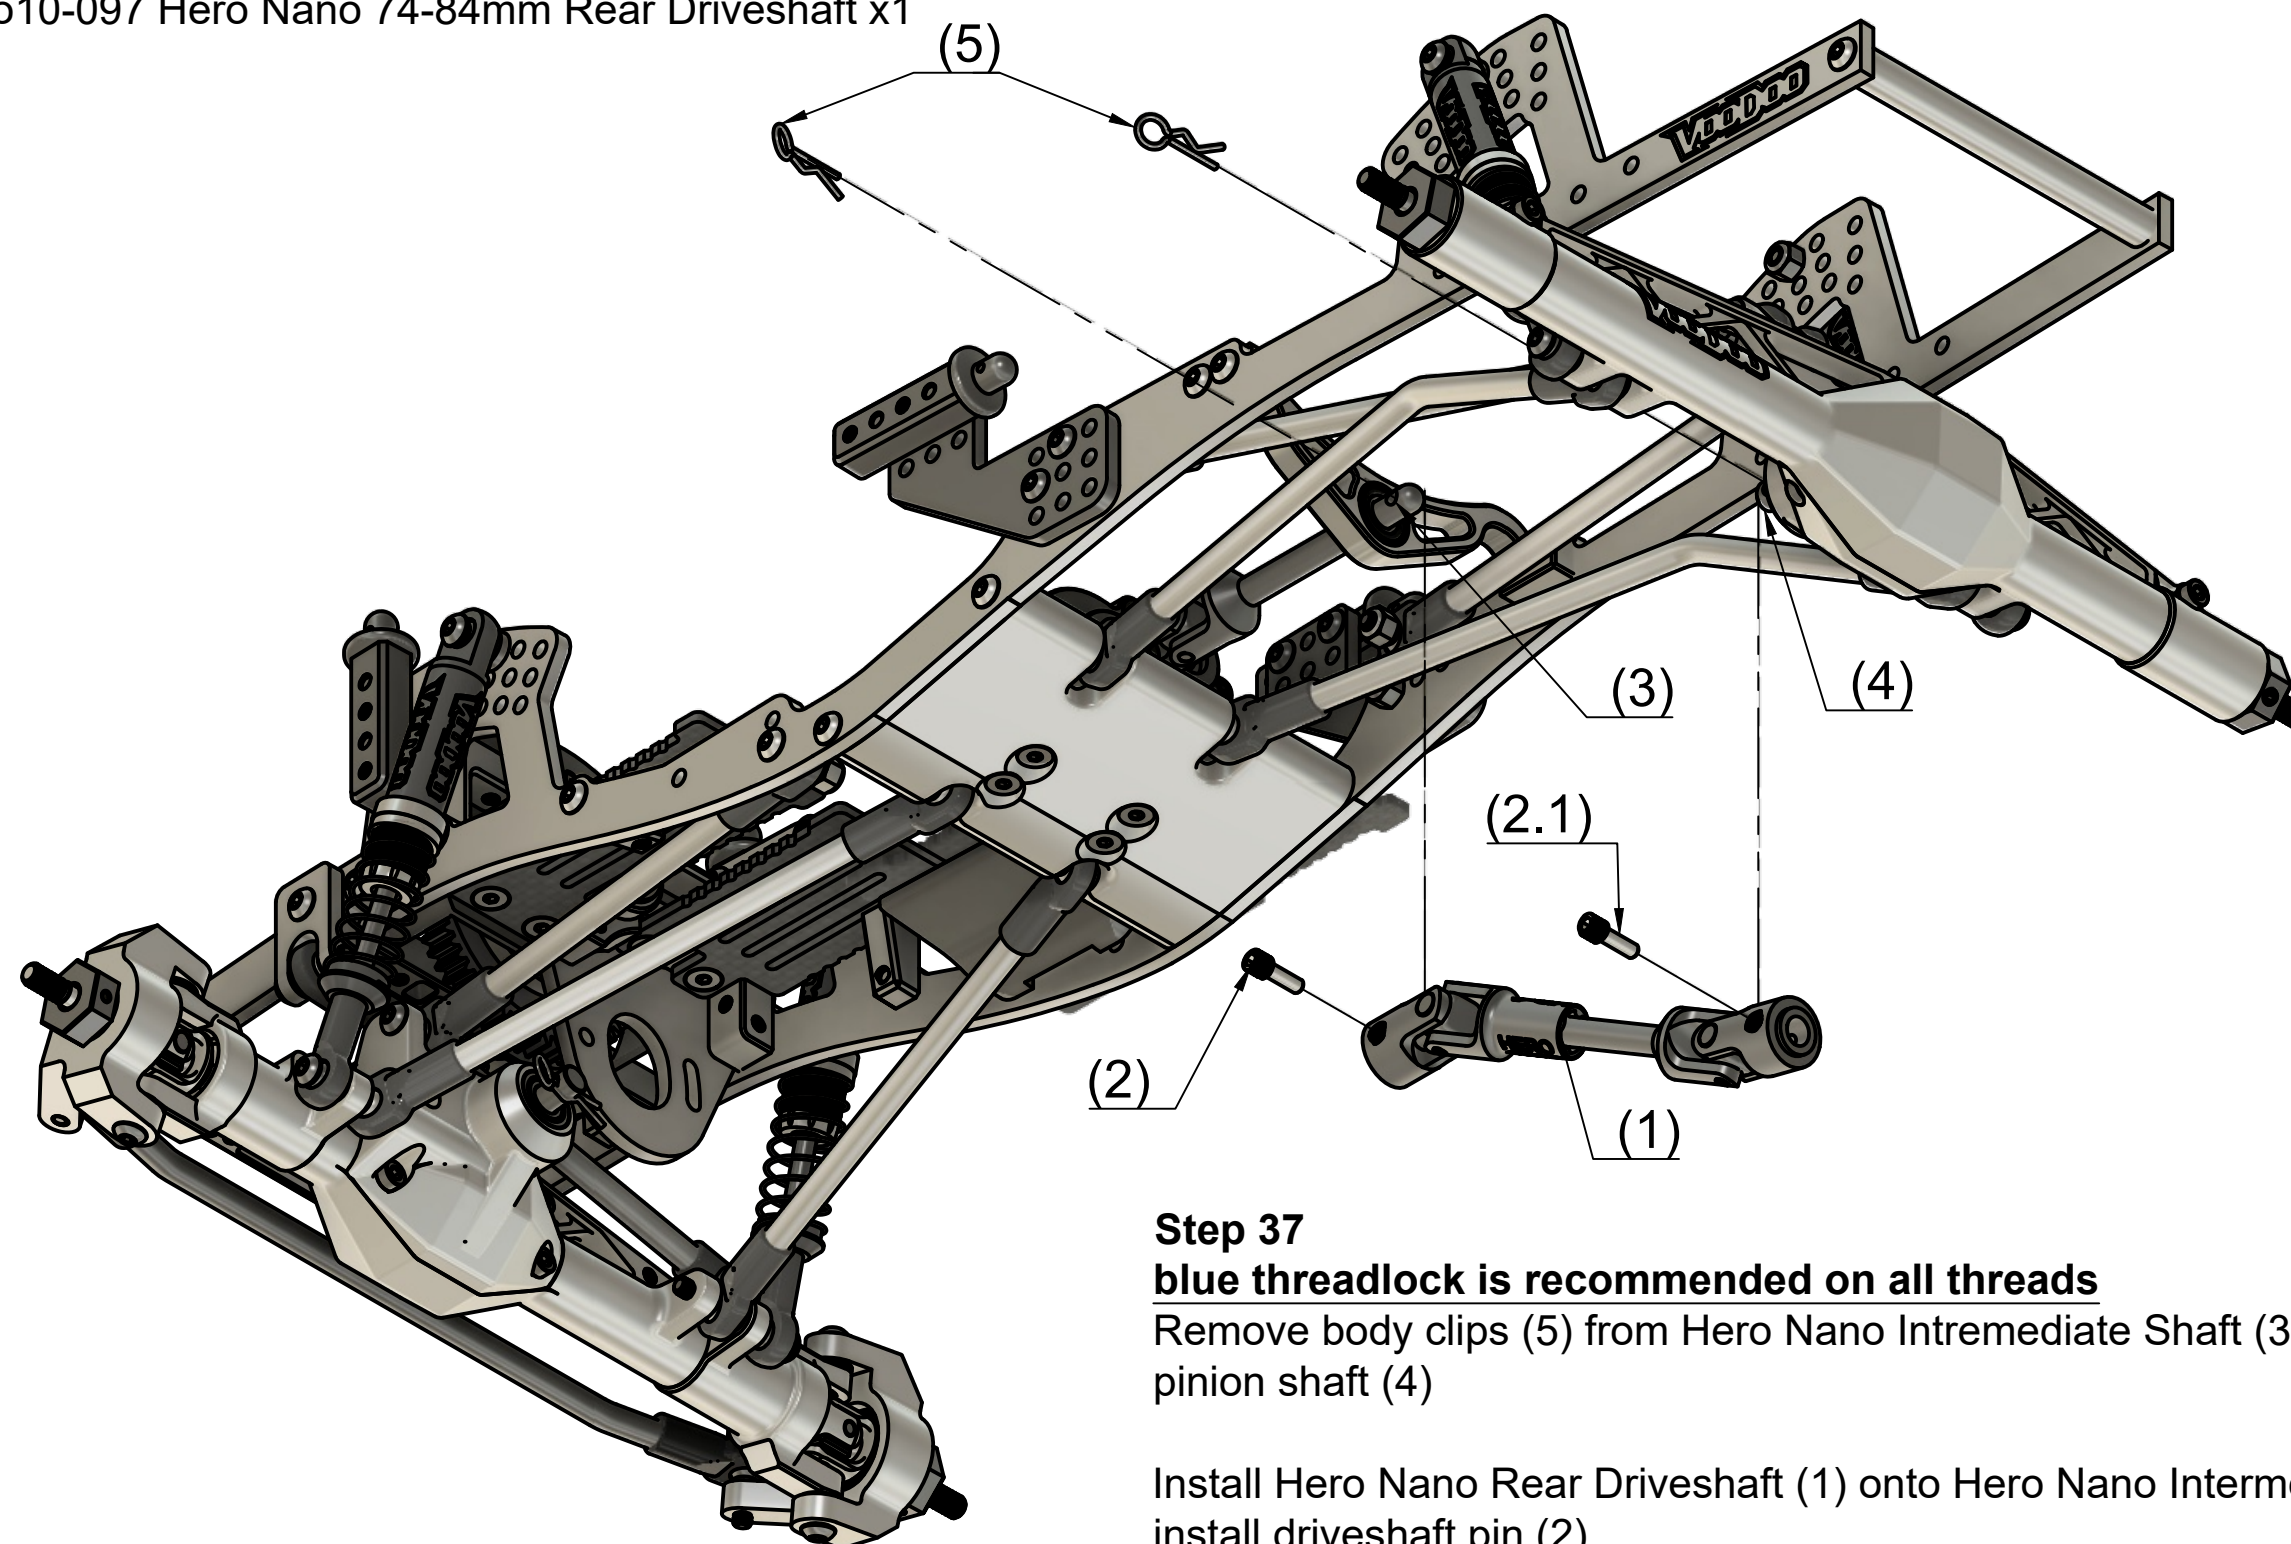

Step 37

blue threadlock is recommended on all threads

Remove body clips (5) from Hero Nano Intermediate Shaft (3) and rear axle pinion shaft (4)

Install Hero Nano Rear Driveshaft (1) onto Hero Nano Intermediate Shaft (3) and install driveshaft pin (2)

Install Hero Nano Rear Driveshaft (1) onto pinion shaft of rear axle (4) and install driveshaft pin (2.1)

