

Wizard CompSpec C2 Assembly Instructions



Parts Needed


Truck assembly from previous steps

Bag B

(1) part# ott-tko10-021 Rear Lower Link x1

(2) part# ott-tko10-018 Right Chassis Rail x1

(3) part# ott-tko10-086 M3 x 0.5 x 35mm button head Screw x1

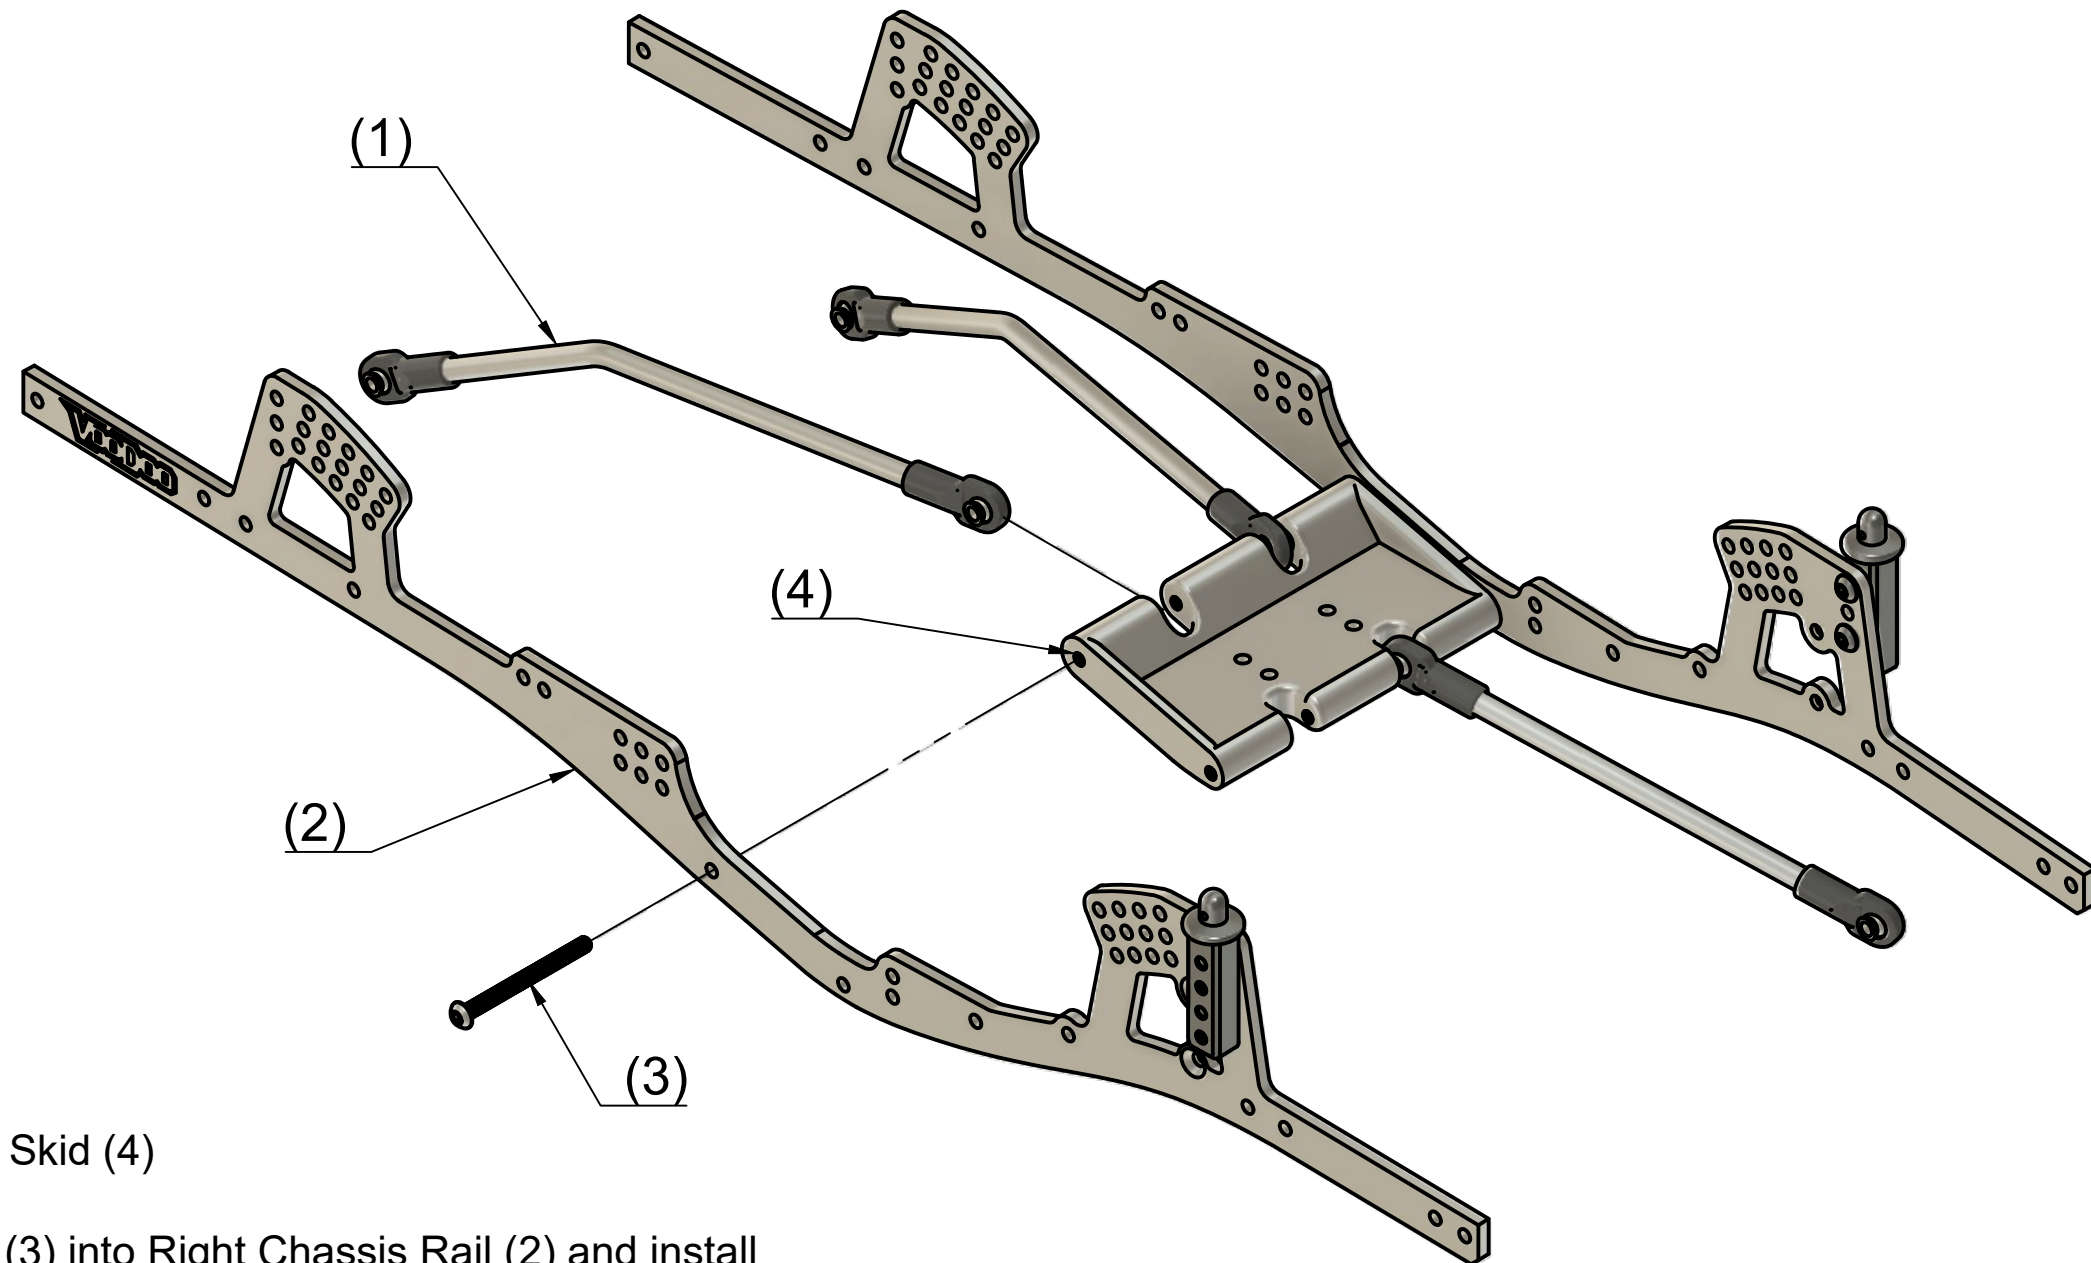

Step 4

Insert Rear Lower Link (1) into Skid (4)

Insert M3 x 0.5 x 35mm screw (3) into Right Chassis Rail (2) and install into rear hole of Skid (4) then loosely tighten screw

