

# Wizard CompSpec C2 Assembly Instructions



## Parts Needed


### Bag A

(1) part# ott-tko10-018 TKO-10 Comp Truck Carbon Fiber Chassis

### Bag B

(2) part# ott-tko10-003 Delrin Body Mount x2

(3) part# ott-tko10-080 M3 x 0.5 x 10mm button head screw x4

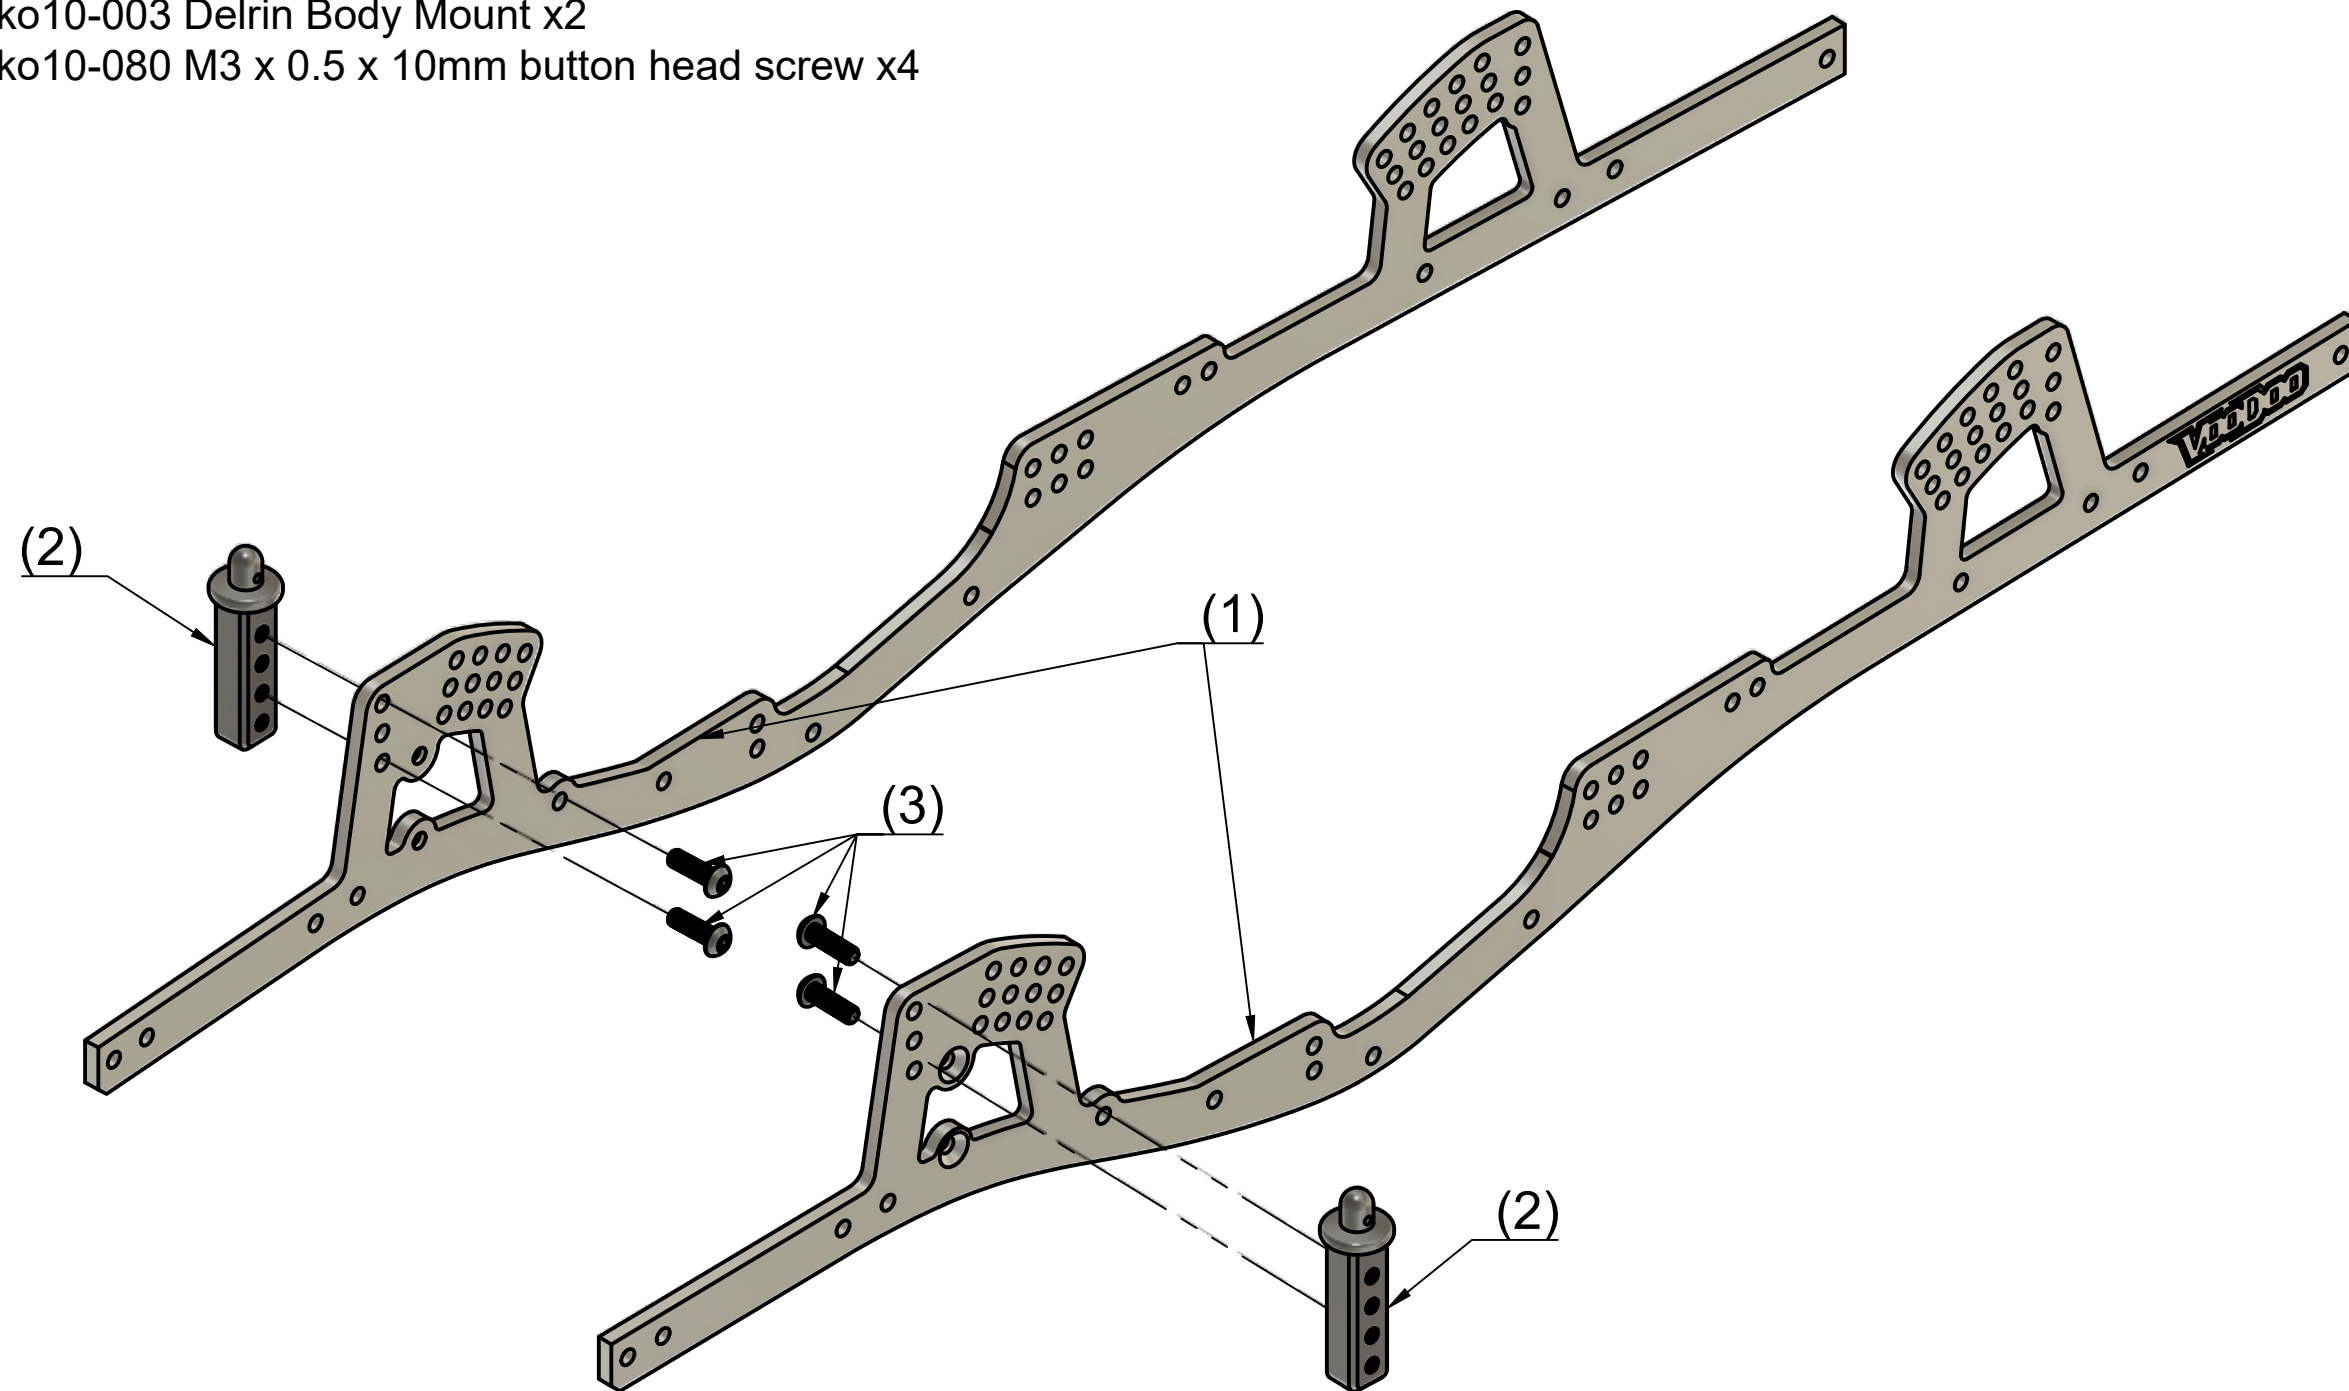

### Step 1

Insert 2 M3 x 0.5 x 10mm screws (3) through chassis (1) and tighten completely into Delrin Body Mount (2)

