

Wizard CompSpec C2 Assembly Instructions




Parts Needed

Truck assembly from previous steps

Bag I

(1) part# ott-tko10-023 Track Bar Link x1

(2) part# ott-tko10-082 M3 x 0.5 x 14mm button head screw x1

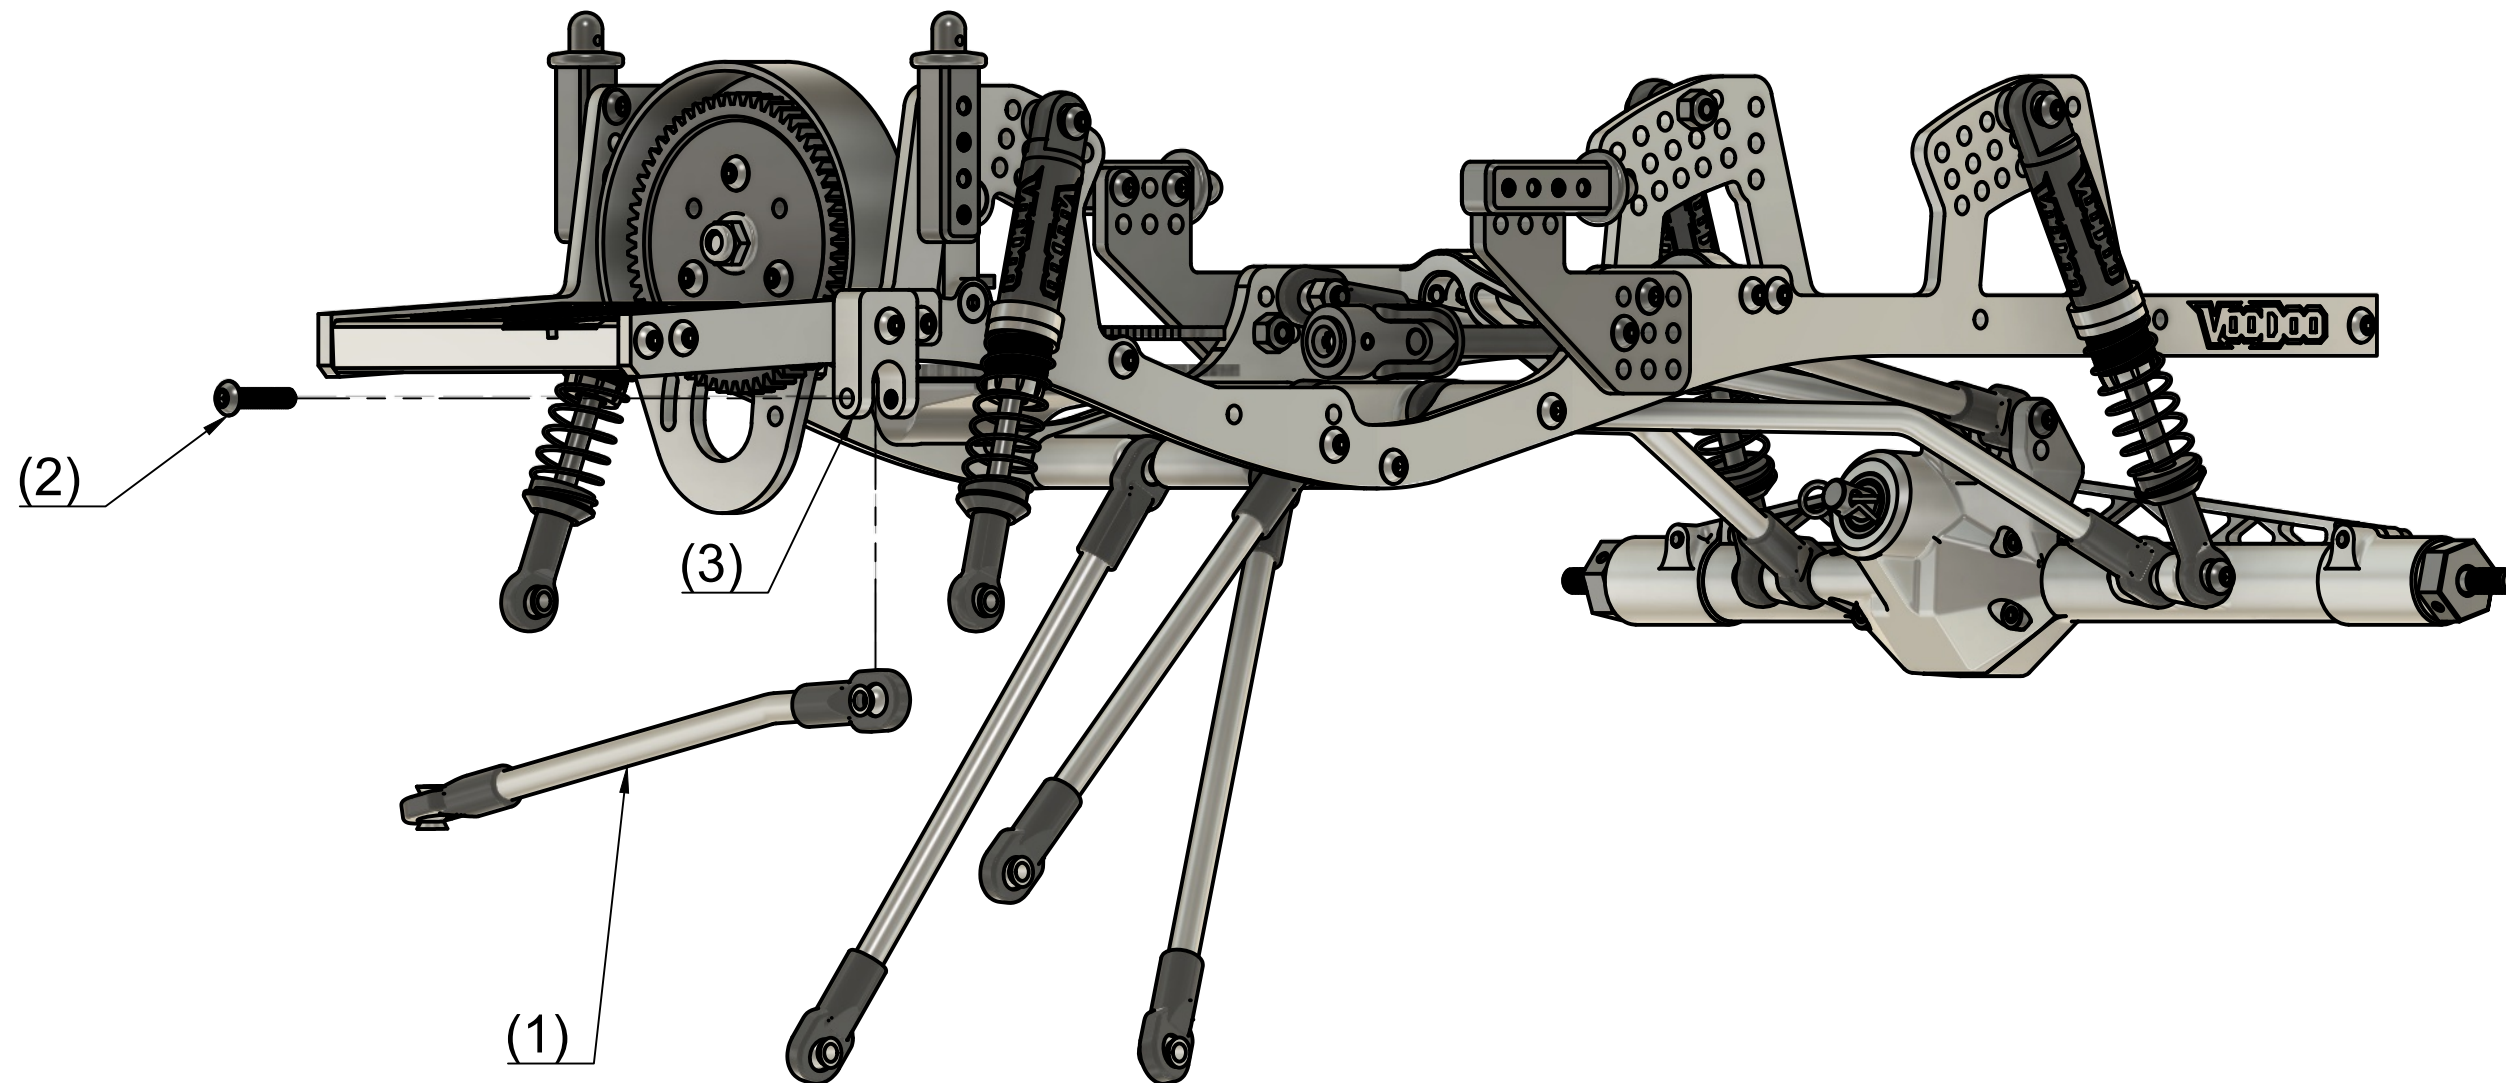

Step 30

blue threadlock is recommended on threads

Insert Track Bar Link (1) into Track Bar Mount (3) then insert and tighten M3 x 0.5 x 14mm button head screw (2)

